
Windshield Projection Head Up Display, (KS1)

From January 2011

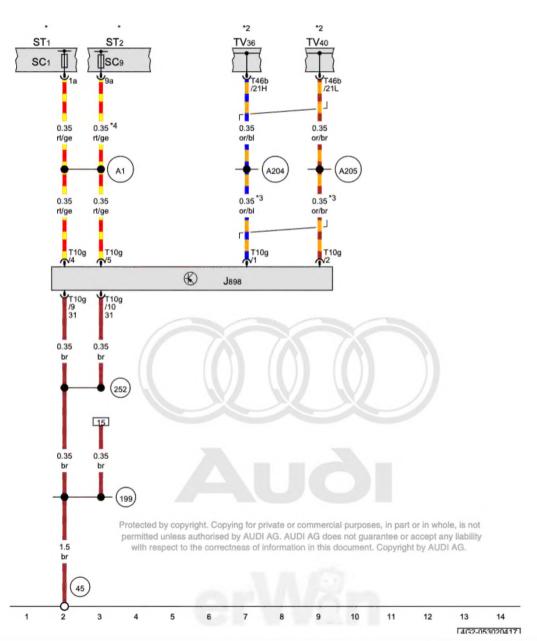

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.





ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
vi	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

= white = black

Windshield Projection Head Up Display Control Module

1898	Win	dshie	eld	Projectio	n Head	Up L	Display	Control	Modul
	_	_	-						

ST1 Fuse Panel 1

SC1 Fuse 1 (On Fuse Panel C)

ST2 Fuse Panel 2

SC9 Fuse 9 (On Fuse Panel C)

T10g 10-Pin Connector

T46b 46-Pin Connector

TV36 Instrument Cluster CAN Bus High Wire Junction, On the Relay and Fuse Panel in the Luggage Compartment, Right

TV40 Instrument Cluster CAN Bus Low Wire Junction, On the Relay and Fuse Panel in the Luggage Compartment, Right

45 Ground Connection Behind Instrument Panel, Center

199 Ground Connection 3 (in Instrument Panel Wiring Harness)

252 Ground Connection (in Optional Equipment Wiring Harness)

A1 Positive Connection 30a (in Instrument Panel Wiring Harness)

A204 Instrument Cluster CAN Bus High Connection (in Instrument Panel Wiring Harness)


A205 Instrument Cluster CAN Bus Low Connection (in Instrument Panel Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions

*2 Refer to Applicable Wiring Diagram for Data Bus Networking

*3 Data Bus Wire (CAN Bus)

*4 From June 2014

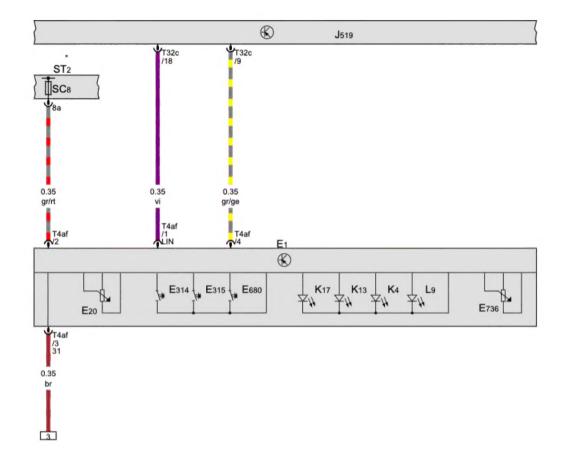

Light Switch, Windshield Projection Head Up Display Button, Vehicle Electrical System Control Module

- E1 Light Switch
- E20 Instrument Panel and Switch Illumination Dimmer Switch
- E314 Rear Fog Lamp Button
- E315 Fog Lamp Button
- E680 Night Vision System Button
- E736 Windshield Projection Head Up Display Button
- J519 Vehicle Electrical System Control Module
- K4 Position Lamp Indicator Lamp
- K13 Rear Fog Lamp Indicator Lamp
- K17 Fog Lamp Indicator Lamp
- L9 Headlamp Switch Illumination Bulb
- ST2 Fuse Panel 2
- SC8 Fuse 8 (On Fuse Panel C)
- T4af 4-Pin Connector
- T32c 32-Pin Connector
 - Refer to Applicable Wiring Diagram for Fuse Positions

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink